User Manual of VMS

Contents

Introduction	1
Chapter 1 Getting Start	2
1.1 Login and Logout	2
1.1.1 Login	2
1.1.2 Switch user	2
1.1.3 Logout	3
1.2 Control panel	3
Chapter 2 Device management	5
2.1 Add devices	5
Chapter 3 Preview	9
3.1 Interface	9
3.2 Device group	10
3.3 View	11
Chapter 4 Playback	12
4.1 Playback	12
Chapter 5 Configuration	14
5.1 Configuration	14
Chapter 6 Account management	16

Introduction

Thank you for using our VMS, if you have any problems or doubts when using the products and software, please contact us anytime.

About this user manual

This User Manual is for VMS software, it is used as a guide. The photos, graphics, charts and illustrations provided in this user manual are only used to explain and illustrate the purpose, they may be different from the specific product, please refer to the actual object.

In this User Manual it is possible that we have some incorrect, or some features and operations that are not compatible with the App, or other printing mistakes. We will update the content of this User Manual according to the features upgrading or verifying, and we will improve and upgrade the description of the products. The new content may not be notified in this User Manual.

Chapter 1 Getting Start

1.1 Login and Logout

This chapter describes login, switching user and logout.

1.1.1 Login

After installation, double click icon in the PC desktop. The login interface shows as **Figure** 1-1.

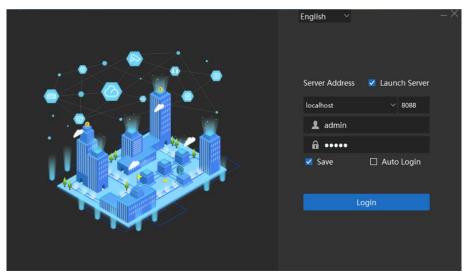


Figure 1-1 Login

User name: Default name is "admin".

Password: Default password is "admin".

Save: Save username and password. It is checked by default.

Auto Login: Automatically login next time. **Language:** Support English,简体中文.

1.1.2 Switch user

After login, you can switch users on the status bar. Click which is next to the login user name, then click "Switch User" menu. A confirmation window will pop up, shown as **Figure 1-2**. Click "OK" button, VMS will logout, then you can login with other user name.

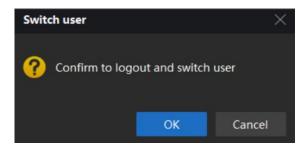


Figure 1-2 Switch user

1.1.3 Logout

Click button and input current user's password to exit VMS.

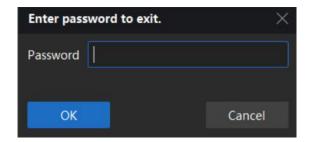


Figure 1-3 logout

Notes:

- For security, please modify your password after login.
- Do not enable save password or Auto Login in public PC.

1.2 Control panel

All the functions can be found in this page, shown as **Figure 1-3.**

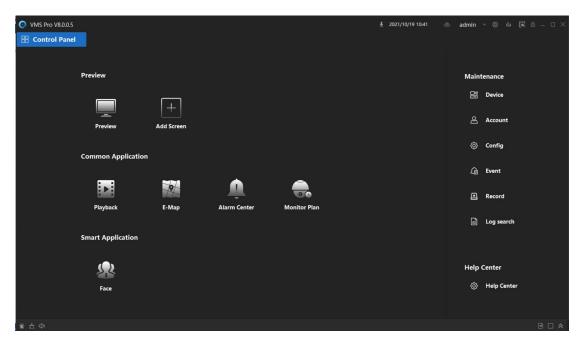


Figure 1-3 Control Panel

Items	Description		
	Device List, Live view, Screen divisions, PTZ controlling,		
Preview	RemoteConfig setting, Stream type setting, Local record/ snapshot.		
Add Screen	Add a new preview screen.		
191	Remote and local records/pictures search, view, playback and		
Playback	download. Enable cut or snapshot during playback.		
Account	Manage users, and assigned permissions.		
Device	Search, add, modify and delete devices.		
(Ĝ)	VMS base configurations, Record/Snapshot save path and other		
Config	settings.		
	Record schedule, record specified channels to local without VMS		
Record	running.		

Table 1-1 Control Panel description

Chapter 2 Device management

At least one device need to be added firstly before previewing. Click button in control panel to enter device management interface, then you can add, or modify, or delete devices, shown as Figure 2-1.

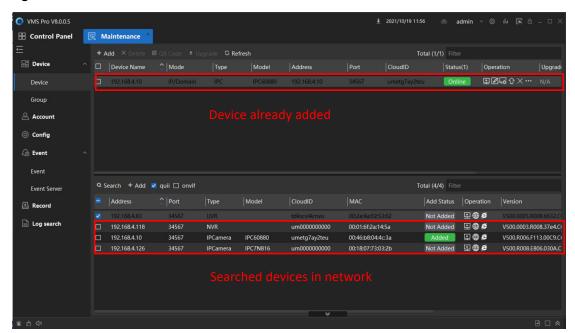


Figure 3-1 Device Manager

2.1 Add devices

There are three ways to add devices, manual add, auto search and Cloud.

■ Manual: Click and input device information to add a device. Shown as Figure 2-1. The information is shown as Table 2-1.

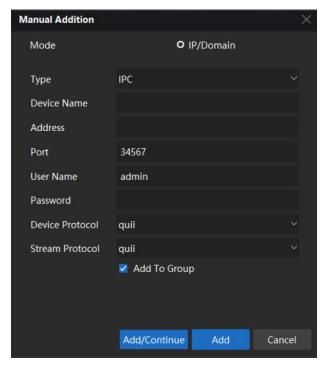


Figure 2-1 Manual addition

Items	Items Description	
Туре	IPC/NVR/UVR/Recorder/EventSVR	
Device Name	Alias in device list.	
Address	IP address.	
Port Number	Default 34567, the same as device media port.	
User Name and	Default username is admin and password is admin.	
password		
Device Protocol	Support QUVII and Onvif.	
Stream Protocol	Support QUVII.	

Table 2-1 Device parameters

If the devices are added, you can have some operations about these devices. Shown as **Table 2-2**.

Operations	Description	
₽	Preview video channel.	
	Edit the device information, include name/address/port/user name/password	
Ė	View and modify the device's configuration.	
⇧	Upgrade the firmware of the selected devices.	
×	Delete the selected devices.	
•••	Include three menus, Modify IP/Web Browser/Status.	

Table 2-2 Device operations

your need. Shown as **Figure 2-2.** If the devices are added, the Add Status will be changed to Added. You can also have some operations about these devices. Shown as **Table 2-3.**

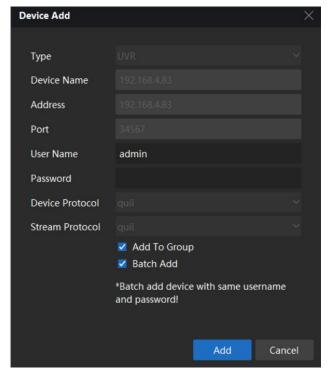
 


Figure 2-2 Auto addition

Operations	Description	
모	Preview video channel.	
	Change device IP address	
E	Access device by web browser.	

Table 2-3 Device operations

■ Cloud: Click which is next to the user name on the status bar.



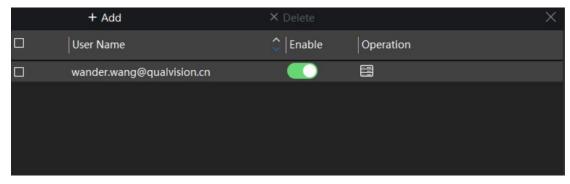


Figure 2-3 Cloud addition

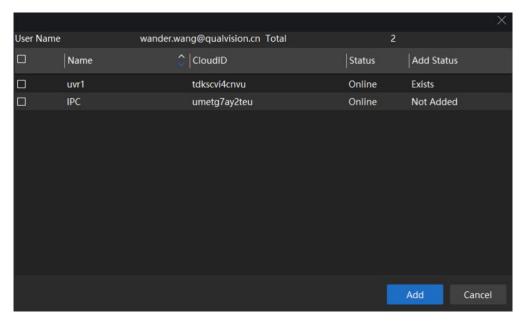


Figure 2-4 Device list

Note:

- Auto search can search devices in the different network.
- If you add devices using cloud account, you must enable the cloud account after every VMS login. Otherwise the status of the devices will be offline.

Chapter 3 Preview

3.1 Interface

After adding the devices, click to enter preview interface, shown as **Figure 3-1**.

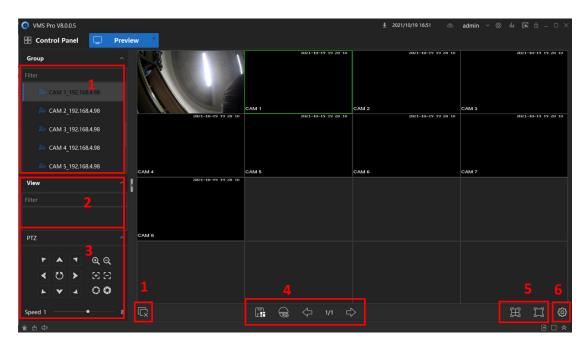


Figure 3-1 Main View

No.	Items	Description
1	Device list	Show all the added devices. Open the selected device
		channels, choose stream type, RemoteConfig setting and
		close all channels.
2	View	View list management. It can open the preview windows
	View	that saved previously.
3	PTZ	PTZ direct control, Zoom in/out, Focus +/-, Iris+/-, Preset,
		Auto tour and other PTZ functions.
4	Monitor Project	Start/Stop monitor project and task.
	Page up/ Page down	Page up/ Page down when the channels cannot display in
	Save view	one page.
5	Windows division	Support 1/4/5/6/8/9/13/16/20/25/36/64/128 windows
		division, and full screen view.
6	Set	Video and snapshot setting.

Table 3-1 Preview description

3.2 Device group

All the searched devices are listed in the Group view, shown in Figure 3-2

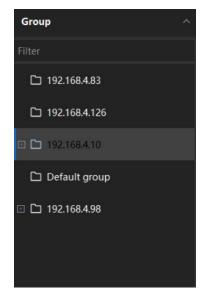


Figure 3-2 device list

Shown as means that the connection is successfully. Shown as means disconnection.

When the device conncets successfully, click to show the menus as **Figure 3-3**. You can choose the stream type to open the channel.

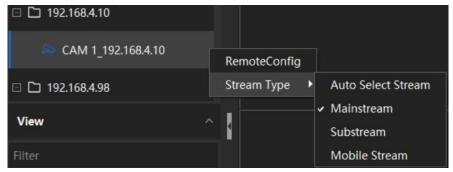


Figure 3-3 Menu

Click RemoteConfig to enter remote configuration interface, you can modify the configurations of device, shown as **Figure 3-4**. For more detail information please refer to NVR operation manual.

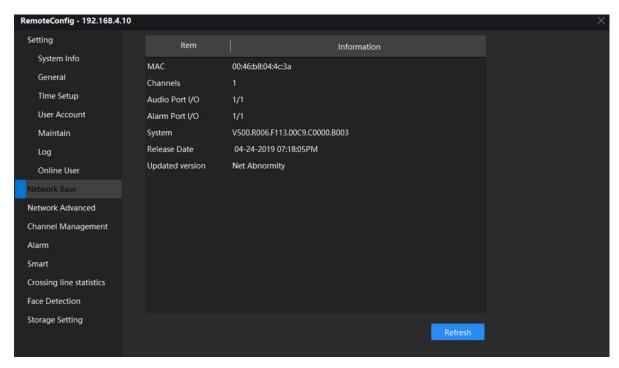


Figure 3-4 RemoteConfig menu

Notes:

- Double click on a channel will enter 1 division, only view the channel selected.
- When view in multi divisions, some of the channel may not be displayed due to the PC performance and stream encode setting.

3.3 View

View List Management function is to save the preview split with a name, so that user can open their previously saved channels only by clicking the saved item in the list. When user want to save preferred view, click the icon and set the name of View, it would be saved in the View list.

AS shown in **Figure 4-6.**

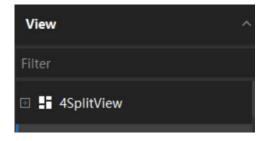


Figure 4-6 View list

Chapter 4 Playback

Playback as an important function in CCTV system. It can help us to check history record in anytime. The VMS of Qualvision has already integrated it into the customer management system, and it can support records search base on channels, device records and local records playback. Download records into the local host hard-disk and others playback control operations. It's simple and easy to use.

4.1 Playback

Click to enter the main playback interface. Shown as **Figure 5.1**.

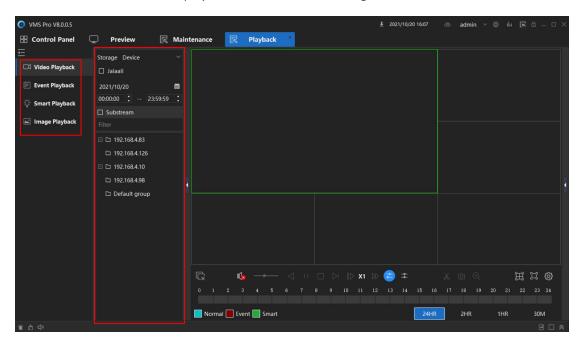


Figure 5.1 Playback interface

Follow the steps below to see the playback. Shown as Figure 5.2.

- **1.** Select the playback type. Choose one from video playback, event playback, smart playback and image playback.
- **2.** Select storage type. "Device" means records are in device storage memory, "Storage server" are in local host storage memory.
- 3. Select the date and time which you want to playback.
- **4.** Double click the device or channel which you want to playback. Or select the device or channel, click "Search" button to search records. Then play the records.

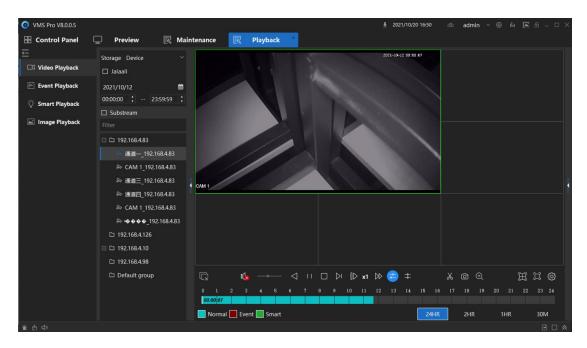


Figure 5.3 Device Record Playback

Notes:

- Synchronous cannot support more than 4 channels.
- VMS maximum supports 9 channels playback at the same time. Playback performance is also related to the local host computer performance.

Chapter 5 Configuration

5.1 Configuration

Click icon to enter configuration interface. In this interface you can modify the base configurations of VMS, record and picture save paths, playback and video configurations, and add alarm audio, set E-mail configuration. Shown as **Figure 5-1**, **Figure 5-2**, **and Figure 5-3**.

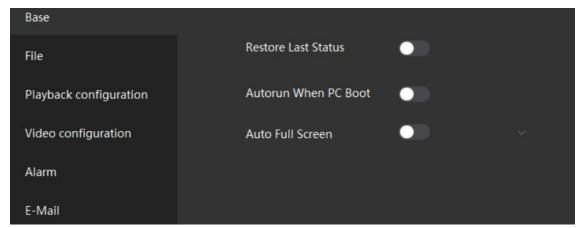


Figure 5-1 Base Configuration

- **Restore Last Status:** The VMS will remember the current state when exit, it will recover when next time launch.
- Autorun When PC Boot: Auto launch when PC start.
- Auto Full Screen: VMS starts with Preview full screen next time.

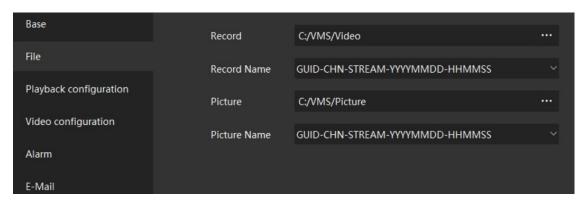


Figure 5-2 File Configuration

- **Record:** Set the path of local record and download.
- Record Name: Save file name rules, cannot be changed.
- **Picture:** Set the path of local snapshot and download.
- **Picture Name:** Save file name rules, cannot be changed.

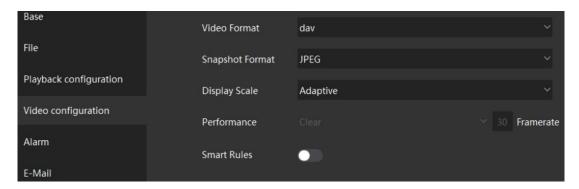


Figure 5-3 Video Configuration

- Video Format: Set the videos format. Support MP4/dav/avi.
- Snapshot Format: Set the snapshots format. Support JPEG/BMP.
- **Display Scale:** Support Adaptive/16:9/4:3/1:1.

Chapter 6 Account management

Click to enter Maintenance interface, then click to enter Account interface. There is a default account name named "admin". You can modify its password. Shown as **Figure 9-1.**

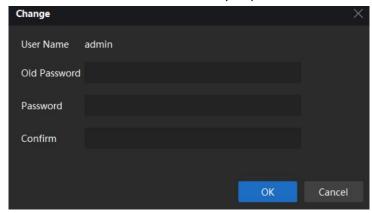


Figure 9-1 Change password

You can click to add a new account. Select account type and account authorities, input user name and password, then click "Save" button to finish adding. Shown as **Figure 9-2.**

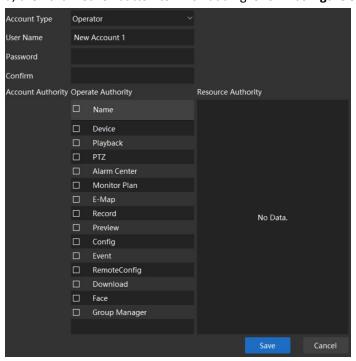


Figure 9-2 Add account

After adding, click on the account, you can modify the user name, password and account authorities. You can click to delete the account.

Note:

• Default account "admin" cannot be deleted or change its authorities.